

Longrange

Setting Delay on 2 TrapTargetTag Counter

To Set a Delay for a Single Target or True Pair:

Before inserting a Card,

Press Trap 2 to increase the delay.

Press Trap 1 to decrease the delay.

Insert your Card.

When ready press the Trap or Doubles button.

To Set A delay for a Report Pair:

Before inserting a Card,

Press Trap 2 to set delay for first target.

Press Trap 1 to decrease delay.

Press the Doubles button.

Set delay for second target by pressing Trap 2

Decrease the delay by pressing Trap 1.

Insert your Card.

When ready press the Doubles button.

How To Use Pyramid Wobble Transmitter With Microphone

Button Operation

Single Targets

Press one of the trap buttons to fire the corresponding trap. The **Green Tx LED** will illuminate to indicate that a signal is being transmitted and the corresponding trap will fire.

Multiple Targets

To fire 2 or more traps simultaneously, press multiple trap buttons at the same time. You may also press the **True Pair/Enter** button. Then, press any combination of trap buttons that you would like to fire. To fire the selected traps, press **True Pair/Enter** again.



Located in locked box.

Voice Operation (Voice Models Only)

Be sure to have the supplied microphone plugged into the **Microphone Jack** on the top of the transmitter and clipped to the lapel of vest or shirt, about 6-9 inches from your mouth. The transmitter can be clipped to a belt or put in a pocket of a shooting vest.

Single Targets

Once the microphone is plugged into the **Microphone Jack**, the transmitter automatically enters voice activation mode. To fire a single target, press one of the 8 trap buttons. This arms the device but does not fire the trap. The **Green Tx Light** will illuminate to indicate that the device is armed and is waiting for the voice command. When ready, call "Pull" in a normal tone of voice to fire the designated trap. The trap will fire and the **Green Tx Light** will go out until another button is pressed.

Multiple Targets

To fire 2 or more traps simultaneously, press the **True Pair/Enter** button. Then, press any combination of trap buttons that you would like to fire. The **Green Tx LED** will flash, indicating the device is armed. To fire the selected traps simultaneously, call "Pull" in a normal tone of voice.

Report Mode (Voice Models Only)

Report Mode is a feature that is used in conjunction with voice operation. **Report Mode** allows the shooter to call for one trap and have a second trap fire on the report of the gun.

To set up **Report Mode**, press the first trap that you would like to fire. The **Green Tx LED** will illuminate to indicate that the device is armed. Before calling for the target, press another trap button. This will be the trap that fires on the report of the gun. When you are ready, call "Pull" in a normal tone of voice to fire the first designated trap. On the sound of the gun, the second trap will fire.

How To Use Trap V-45

Transmitter With Microphone

Button Operation

Press **Trap** to fire the corresponding trap.



Located in mail box.

Voice Operation (Voice Option Only)

Be sure to have the supplied microphone plugged into the **Microphone Jack** on the top of the T4300-Trap and clipped to the lapel of vest or shirt, about 6-9 inches from your mouth. The transmitter can be clipped to a belt or put in a pocket of a shooting vest.

Once the microphone is plugged into the **Microphone Jack**, the T4300-Trap automatically enters voice activation mode. To fire a single target, press the **Trap** button. This arms the device but does not fire the trap. When ready, call "Pull" in a normal tone of voice to fire the designated trap.

Lock On Mode (Voice Option Only)

The **Lock On Mode** is a feature of the T4300-Trap and is used in conjunction with voice operation.

Lock On Mode allows the Trap button to be locked in and launched with a verbal command without pressing the button each time.

To lock in the trap, press and hold the **Trap** button for **5 seconds** until the green Tx light begins to blink. The trap is now locked in. When ready, call "Pull" in a normal tone of voice to fire the trap. After 4 seconds, the transmitter will re-arm and will be ready to fire the same trap. Request the target using the microphone and the trap will again fire. If the target does not launch, the button was not held down long enough to activate **Lock On Mode**. Redo the steps above and be sure to hold down the button for at least **5 seconds**. To exit **Lock On Mode**, press the **Trap** button

How To Use Sporting Clays & Springing Teal Transmitter With Microphone

Button Operation (T4300A & T4300A-V)

Press **Trap 1** or **Trap 2** to fire the corresponding trap. The **Green TX LED** will illuminate to indicate that a signal is being transmitted and the corresponding trap will fire. Press the **Doubles Button** to fire a True Pair, which will fire both traps simultaneously.



Located in mail box.

Voice Operation (T4300A-V Only)

Be sure to have the supplied microphone plugged into the **Microphone Jack** on the top of the T4300A-V and clipped to the lapel of vest or shirt, about 6-9 inches from your mouth. The T4300A-V can be clipped to a belt or put in a pocket of a shooting vest.

Once the microphone is plugged into the **Microphone Jack**, the T4300A-V automatically enters voice activation mode. To fire a single target, press either **Trap 1** or **Trap 2**. This arms the device but does not fire the trap. The **Green Tx Light** will illuminate to indicate that the device is armed and is waiting for the voice command. When ready, call "Pull" in a normal tone of voice to fire the designated trap. The trap will fire and the **Green Tx Light** will go out until another button is pressed.

To fire both traps simultaneously, press the **Doubles** button. This arms the device but does not fire the traps. The **Green Tx Light** will illuminate to indicate that the device is armed and is waiting for the voice command. When ready, call "Pull" in a normal tone of voice to fire both trap 1 and trap 2. The traps will fire and the **Green Tx Light** will go out until another button is pressed.

Lock On Mode (T4300A-V Only)

The **Lock On Mode** is a feature of the T4300A-V and is used in conjunction with voice operation. **Lock On Mode** allows **Trap 1**, **Trap 2**, or **Doubles** to be locked in and launched with a verbal command without pressing a button each time.

To lock in a trap or a true pair, press and hold either **Trap 1**, **Trap 2**, or **Doubles** until the **Green Tx LED** flashes (4 seconds). The selected trap(s) are now locked in. When ready, call "Pull" in a normal tone of voice to fire the designated trap(s). The Trap(s) will fire and the **Green Tx Light** will go out. After 4 seconds, the **Green Tx Light** will begin to flash again and the T4300A-V will be ready to fire the same trap(s). To exit **Lock On Mode**, press any button.

Report Mode (T4300A-V Only)

Report Mode is a feature of the T4300A-V and is used in conjunction with voice operation. **Report Mode** allows shooter to call for one trap and have the other trap fire on the report of the gun.

To set up **Report Mode**, press the first trap that you would like to fire (**Trap 1** or **Trap 2**). The **Green Tx LED** will illuminate to indicate that the device is armed. Before calling for the target, press the other trap button. This will be the trap that fires on the report of the gun. When you are ready, call "Pull" in a normal tone of voice to fire the first designated trap. On the sound of the gun, the second trap will fire.

How To Use 5-Stand Transmitter

With Microphone



Button Operation

Single Targets

Press one of the trap buttons to fire the corresponding trap. The **Green Tx LED** will illuminate to indicate that a signal is being transmitted and the corresponding trap will fire.

Multiple Targets

To fire 2 or more traps simultaneously, press multiple trap buttons at the same time. You may also press the **True Pair/Enter** button. Then, press any combination of trap buttons that you would like to fire, up to 8. To fire the selected traps, press **True Pair/Enter** again.

Located in mail box.

Voice Operation (Voice Models Only)

Be sure to have the supplied microphone plugged into the **Microphone Jack** on the top of the transmitter and clipped to the lapel of vest or shirt, about 6-9 inches from your mouth. The transmitter can be clipped to a belt or put in a pocket of a shooting vest.

Single Targets

Once the microphone is plugged into the **Microphone Jack**, the transmitter automatically enters voice activation mode. To fire a single target, press one of the 8 trap buttons. This arms the device but does not fire the trap. The **Green Tx Light** will illuminate to indicate that the device is armed and is waiting for the voice command. When ready, call "Pull" in a normal tone of voice to fire the designated trap. The trap will fire and the **Green Tx Light** will go out until another button is pressed.

Multiple Targets

To fire 2 or more traps simultaneously, press the **True Pair/Enter** button. Then, press any combination of trap buttons that you would like to fire. The **Green Tx LED** will flash, indicating the device is armed. To fire the selected traps simultaneously, call "Pull" in a normal tone of voice.

Report Mode (Voice Models Only)

Report Mode is a feature that is used in conjunction with voice operation. **Report Mode** allows the shooter to call for one trap and have a second trap fire on the report of the gun.

To set up **Report Mode**, press the first trap that you would like to fire. The **Green Tx LED** will illuminate to indicate that the device is armed. Before calling for the target, press another trap button. This will be the trap that fires on the report of the gun. When you are ready, call "Pull" in a normal tone of voice to fire the first designated trap. On the sound of the gun, the second trap will fire.

How To Use Microphone on Skeet-V Transmitter

Without Voice Control (Group Shooting)

- 1) Activate trap machine—Do not press any buttons on transmitter!
- 2) Assume shooting position.
- 3) Pressing any button on transmitter will fire clays—**Waking up the transmitter will fire a clay!**

With Voice Control (Individual Shooting out Auto Skeet Sequencing-Recommended)

- 1) Open Skeet houses and arm trap machines—Do not press any buttons on transmitter
- 2) Assume shooting position (station #1 or desired practice station)
- 3) Plug in microphone
- 4) Press desired trap button (High/Low/Double)
- 5) Call “pull”. The selected trap(s) will be released. Repeat steps 4 & 5 as desired

With Voice Control (Individual Shooting with Auto Skeet Sequencing)

- 1) Open skeet houses and arm trap machines—Do not push any buttons on transmitter
- 2) Assume shooting position at station #1
- 3) Plug in microphone
- 4) Activate Skeet Sequence Mode by pressing and holding the doubles button for **6+** seconds until the Green Tx LED blinks very rapidly (do not be fooled by blinking LED at 4 seconds)
- 5) Call “Pull” and a high house clay will be released
- 6) Call “Pull” again and a low house clay will be released
- 7) Call “Pull” again and a double will be released
- 8) Move to station #2 and repeat steps 5-7
- 9) Move to station #3. The system will know to throw just a high single and a low single
- 10) Continue to complete your game.
- 11) At any time, press the desired trap button and then call “Pull” to take your option shot. This step will also allow you to continue your game if you get out of sequence for any reason



↑
Located in Skeet house “A and B” behind/under low house machine

12) To exit auto sequence mode, press and hold the doubles button until the green LED stops blinking. Wait 10 seconds before pressing other buttons

How To Use Trap V-45

Transmitter With Microphone

Button Operation (T4 & T4-V)

Single Targets

Press one of the 4 single trap buttons to fire the corresponding trap. The **Green Tx LED** will illuminate to indicate that a signal is being transmitted and the corresponding trap will fire.

True Pairs

To fire 2 traps simultaneously, press one of the **True Pair** combination buttons. The corresponding pair will fire simultaneously.



Located in mail box.

Voice Operation (T4-V Only)

Be sure to have the supplied microphone plugged into the **Microphone Jack** on the top of the T4-V and clipped to the lapel of vest or shirt, about 6-9 inches from your mouth. The T4-V transmitter can be clipped to a belt or put in a pocket of a shooting vest.

Single Targets

Once the microphone is plugged into the **Microphone Jack**, the T4-V automatically enters voice activation mode. To fire a single target, press one of the 4 trap buttons. This arms the device but does not fire the trap. The **Green Tx Light** will illuminate indicating the device is armed and waiting for the voice command. When ready, call “Pull” in a normal tone of voice to fire the designated trap. The trap will fire and the **Green Tx Light** will go out until another button is pressed.

True Pairs

To fire a true pair, press one of the **True Pair** combination buttons. The **Green Tx LED** will illuminate indicating the device is armed. Call “Pull” in a normal tone of voice. The corresponding pair will fire simultaneously and the **Green Tx LED** will go out until another button is pressed.

Report Mode (T4-V Only)

Report Mode is a feature of the T4-V and used in conjunction with voice operation. **Report Mode** allows shooter to call for the first target with the sound of their voice and the second target will fire on the report of the gun.

To set up **Report Mode**, press the first trap that you would like to fire (1-4). The **Green Tx LED** will illuminate to indicate that the device is armed. Before calling for the target, press another trap button to select the trap you would like to fire on the report. When you are ready, call “Pull” in a normal tone of voice to fire the first designated trap. The second selected trap will arm automatically and wait for the report of the gun. On the sound of the gun, the second trap will fire.