

How to use the card reader at each sporting clays station

1

- When you approach the card reader, the screen will be blank.



2.

- You will need to **wake it up.**
- To wake it up, just press any button on the wireless transmitter (manual transmitter if hooked up). When its awake, this is what you should see.



3.

- Once the screen wakes up, insert your game card into the reader.
- The screen will display the remaining balance on your card.



4

1. Play Your Game

- After inserting the card (**card must be left in the reader**), head to your shooting stand and start your round.
- The card reader will deduct money from your balance for each clay target that is thrown.

2. Repeat at Each Station

- At each new sporting clays station, follow the same steps: wake up the reader, insert your card, and play.